

BECKER SAR-DF-517 Quick Ref Guide



1. On/Off Push Btn
2. Page select Knob
6. Change Frequency
7. Brightness Btn
8. Store Button
9. Clear Btn
10. Squelch Level

Figure 1.

Power On

1. Push On/Off Button (1)

Training/Emergency Mode

1. Power On (Have 10 sec. to switch)
2. Turn "Page" Kb (2) CW to select

Emergency Freq: 121.5mhz, 156.80mhz, 243.00mhz, 406mhz

Training Freq: Adjustable Freq. 1-3 on Page 6, 1 – 3 Freq. will be displayed on page 1 Lower right

Brightness Control

1. Push and hold "REP" Btn while turning Page Btn (2)

Training Mode Frequency Adjustment (Four Frequencies only)

1. See Figure 2. Power Up
2. Select Training Mode within 1st 10 sec by turning the Page Kb (2) to under line "Training".
3. Page Kb (2) CW to page 6
4. **Select Freq.:** Rotate +/- Kb (11) to move black high-light over MHz/kHz. Note Freq. range value for that selection on right.
5. Adjust Freq. MHz 1st with +/- Kb (6).
6. Press Store Btn (8) to store MHz.
7. Rotate +/- Kb (11) to move black high-light to select kHz.
8. Rotate +/- Kb (6) to change value of kHz. Press Store again

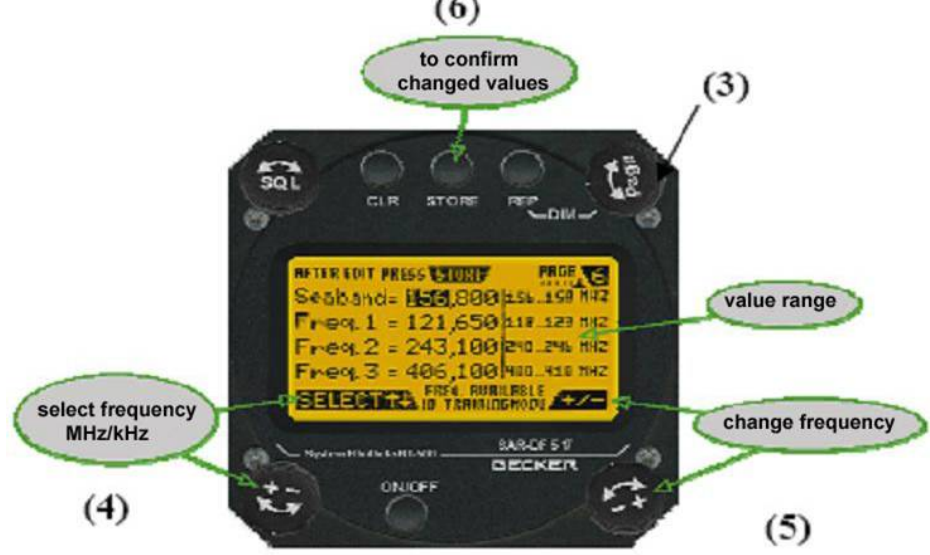


Figure 2

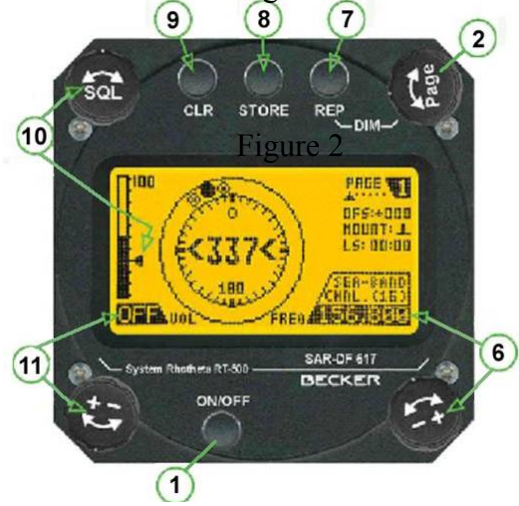


Figure 3

Frequency Selection (Training Mode)

1. Set desired Frequencies on Page 6
2. Select Page 1 using Kb (2). See Fig 3.
3. Rotate Kb (6) one click at a time to set one of four frequency.

Squelch Adjustment (Raise and lower Black squelch arrow)

1. Rotate Kb (10) until the black level arrow pointer is at the top of the black signal level.

Volume Adjustment: Rotate Kb 11 for adjustment.